







- Order data as general progressive lens by giving Far Vision power and Addition reading power
- The degressive power of iRoom will be automatically calculated by iRoom program
- The working zone of iRoom generally within 3 meters from the reading zone
   ( the actual distance of the working zone depends very much on the addition power and result of the iRoom program calculation)
- "+" fitting cross located in between the two progressive engravings

## **iRoom Progressive Marking:**

**Temple** 

Nasal

m



